

HQ CABINS - Combined Chassis Base Preparation

Step1: Place all the chassis pieces on top of the long beams:



Step2: Prepare the tools you need to join the chassis:




Step3:Mounting bolt, make sure bolt washers and bolt caps are on the correct place:



Step4:Secure the chassis to the long beams:




Step4: Screw the triple fold channels onto the steel frame, about 400mm intervals on the 2.6m side and 610mm intervals on the long side(3.8m/5m/6.2m...):

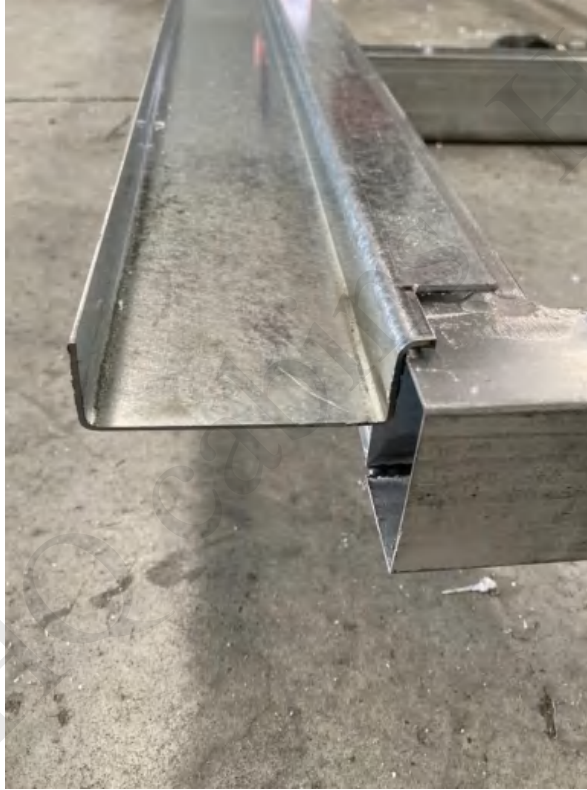



Step5: Place plywood on the prepared base

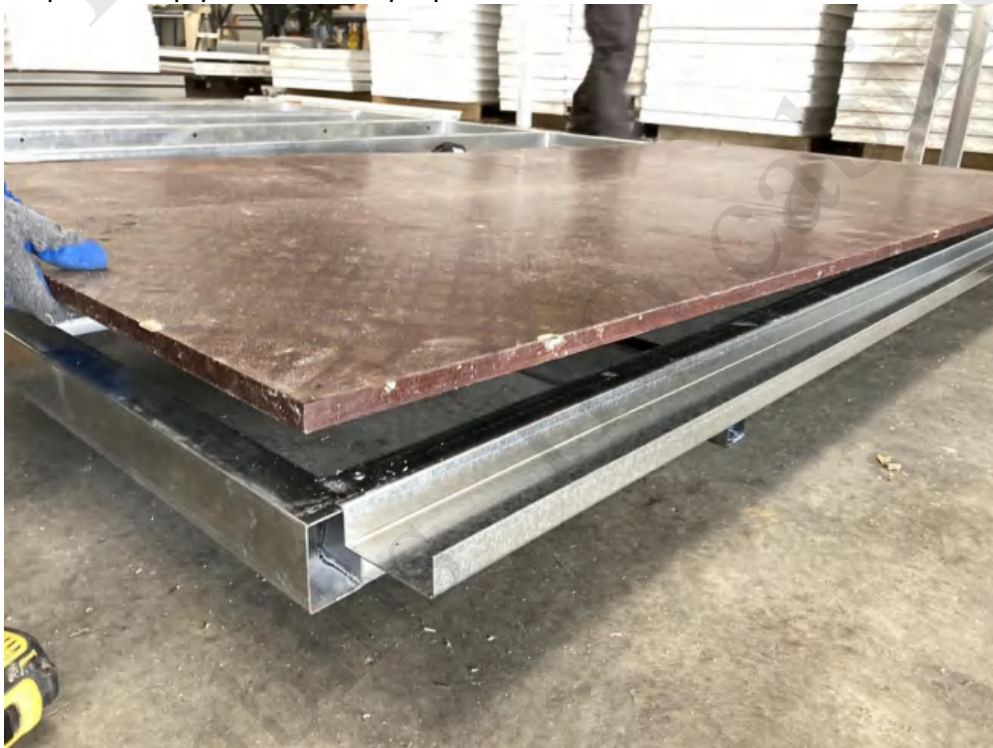

Step6: Using self-drilling/countersunk head screws supplied to attach plywood to steel frame. For more details please refer to our Standard Assembly Guide Page4- Base Preparation-Step2



Step7: Rivet the 1755mm U channel(which is placed under the ranch slider) to the triple fold channel. You can start by inserting the corner wall panels first to decide the right position.



For the following steps please refer to our Standard Assembly Guide.